


Correct Spindle Length for Push Button Latches


If the spindle is too short, the latch will not engage, if it is too long the inside lock lever will not operate correctly.

When the latch is included with a purchased storm door, the push button latch spindle should be the correct length. When the push button latch is purchased as a replacement part, a serrated spindle is included so that the latch can fit numerous thicknesses of storm doors.

The illustrations below show how to correctly adjust the serrated spindle length.

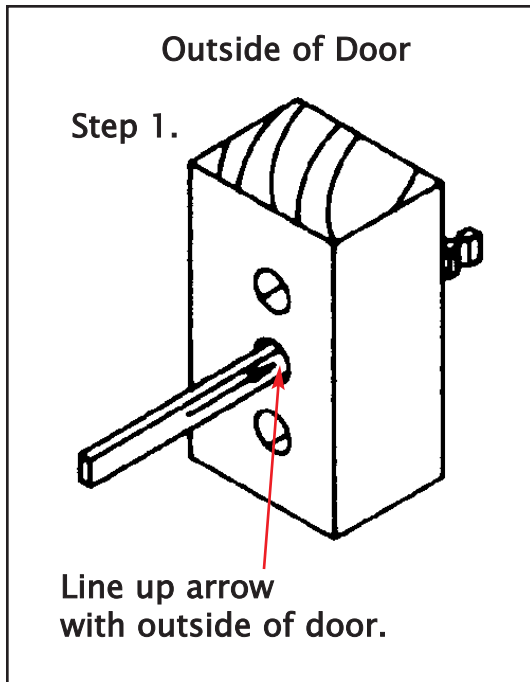

Step 1. From the outside of the door, place the serrated edge of the spindle through the center hole. Line up the arrow on the spindle with the outside of the door. Hold the spindle in this position.

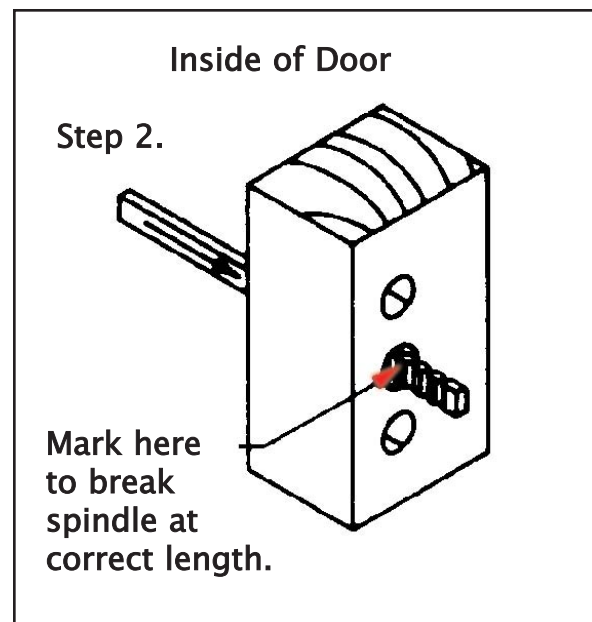

Step 2. On the inside of the door, mark the first serration from the interior surface of the door. This location is where the spindle should be broken off.

It is best to use two pliers when breaking the spindle – one on either side of the serration as close to the serration as possible. Bend the spindle until it breaks at the correct serration.

What can you do if the spindle breaks at the wrong location?

Write, call or E-mail Customer Service at Wright Products and we will send you a replacement spindle – free of charge!

Wright Products, 107 W. Coleman St., Rice Lake, WI 54868

1-877-560-8770

CustomerService@Wright-Products.com