



Installation Instructions

Attach handle at center of lower rail of storm window. Install adjusters as shown in illustration and tighten or loosen nuts to obtain desired friction to hold and operate the window.

Holds windows firmly in any desired position and eliminates rattle.

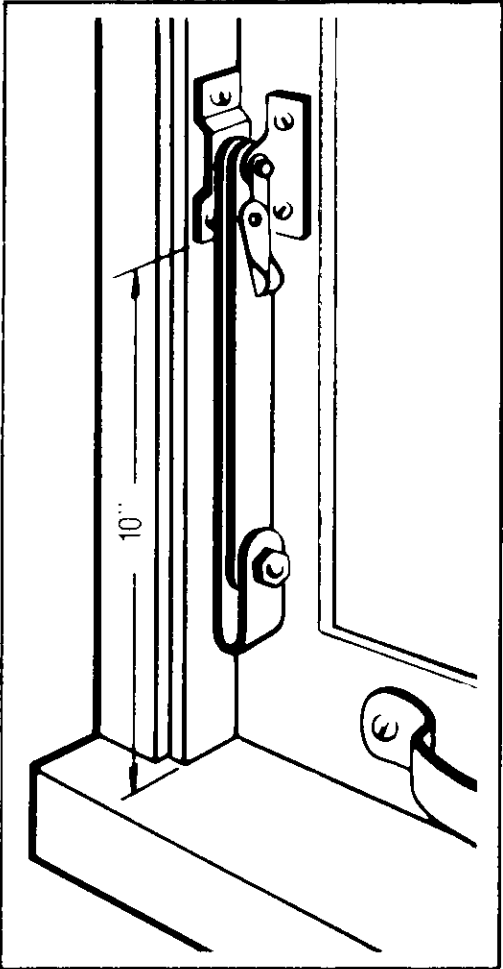

Locks storm window securely by swinging arms to upward position.

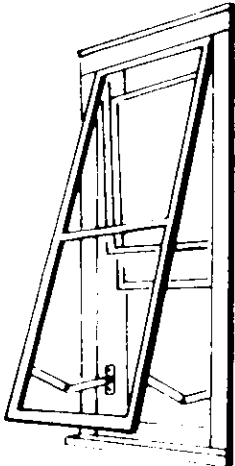

Wright Products

Rice Lake, Wisconsin 54868 U.S.A.