


Installation Instructions


Attach handle at center of lower rail of storm window. Install adjusters as shown in illustration and tighten or loosen nuts to obtain desired friction to hold and operate the window. When removing storm window - open window and turn locking lever so as to permit the pin to be removed or disengaged from the bracket which is attached to the storm window.

Holds window firmly in any desired position - eliminates rattle and necessity for hook and eye. The friction arms of No. 60 disengage at the storm window, remain on the window frame and cannot be damaged by being stored with storm windows.

Adjuster can also be used to fasten and operate screens by using No. 60-B screen attachment set included.

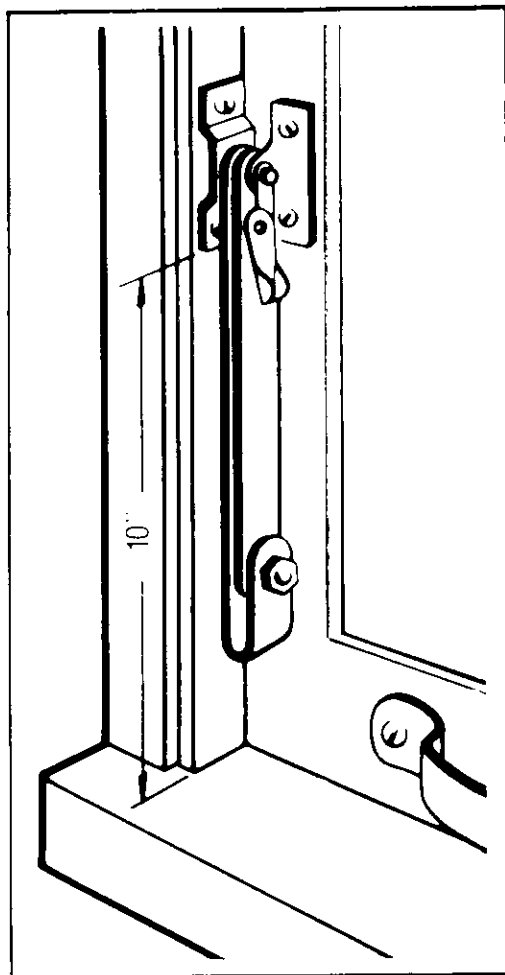

Locks storm window securely by swinging arms to upward position.

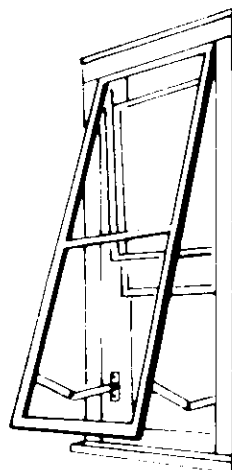

Wright Products

Rice Lake, Wisconsin 54868 U.S.A.