

INSTALLATION INSTRUCTIONS

Installation Instructions for lock plates


Step 1 - Close windows.

Step 2 - Using shorter screws mount one lock plate on either left or right side rail of upper sash firm against lower rail with legs tight against the side as shown.

Step 3 - Remove keys from lock and push lock forward. Position window lock on top of lower sash with rod of window lock through hole in lock plate. Fasten using longer screws provided.

Step 4 - Position second lock plate three inches or more above the first. (See diagram above.)

Step 5 - Window can now be securely locked in closed or ventilating position.

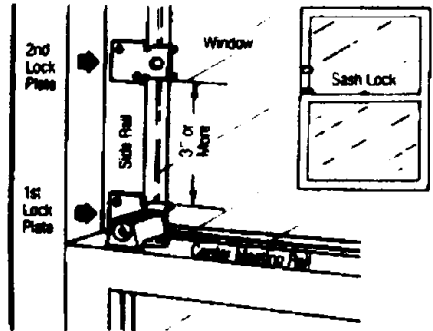

Installation Instructions for eyelets

Step 1 - Close window


Step 2 - Drill a 13/32" hole 1/2" deep on either the left or the right side rail of the upper sash. The hole is to be centered 9/16" above center meeting rail and 1" or more in the "side jamb" as shown.

Step 3 - Using hammer, tap eyelet into drilled hole.

Step 4 - Remove keys from lock and push lock forward. Position lock on top of "center meeting rail" with rod of window lock through hole in eyelet. Fasten lock using longer screws provided.

Step 5 - Position second eyelet 3" or more directly above the first eyelet as shown.

Step 6 - Window can now be locked in either closed or ventilating position.

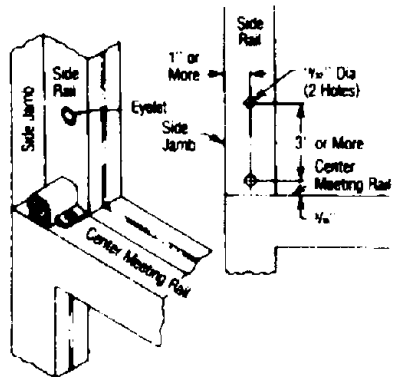

Wright Products

Rice Lake, Wisconsin 54868
98288-000 Rev.B