

Installation Instructions

For outside sliding door

Step 1

Door must be in closed position

Step 2

Position lock on sill or edge of stationary door. Hold in place and push key way to extend bolt and mark location for bolt.


Step 3

Drill $\frac{3}{8}$ " diameter hole to accept locking bolt.

Step 4

Fasten to sill or edge of door with screws provided.

Caution: Insure clearance of door glass before drilling.

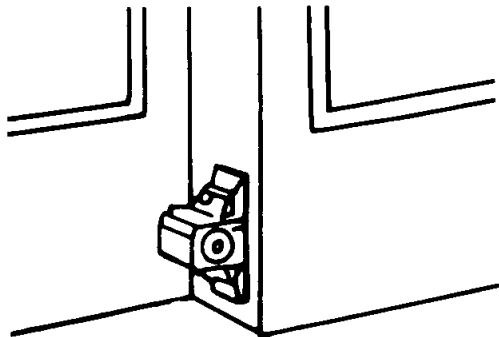

For inside sliding door

Step 1

Position on edge of moving door.

Step 2

Attach as outlined in above instructions.

Wright Products

Rice Lake, Wisconsin 54868 U.S.A.

98291-00 Rev. A