

Installation Instructions

CAUTION: DO NOT INSERT KEY INTO LOCK UNTIL AFTER LOCK IS INSTALLED ON DOOR.

Step 1 Cut template along dotted line corresponding to type of door installation. "Inswinging" if door opens in. "Outswinging" if door opens out.

Step 2 With door in closed position, place edge of template against jamb at desired height. Mark for holes.

Step 3 Drill top and bottom holes $\frac{5}{16}$ " and the center hole $\frac{3}{4}$ " completely through door.




Step 4 Assemble spindle to outside keylock unit.

Step 5 Insert O.S. lock with spindle from outside of door. Mark and cut spindle to extend $\frac{5}{16}$ " above surface of door and shims if used.

Step 6 Install latch on inside of door with bolt facing jamb. Install and tighten screws.

For outswinging installation, chisel clearance for bolt in jamb and install small strike or latch directly on Z bar (see outswinging installation diagram).

For inswinging installation, install large strike as shown in inswinging installation diagram.

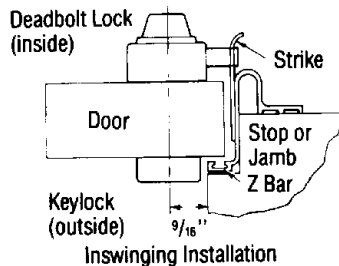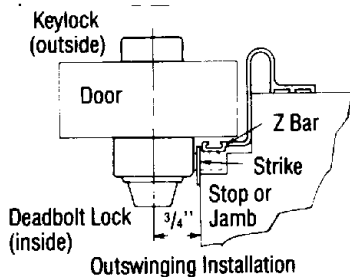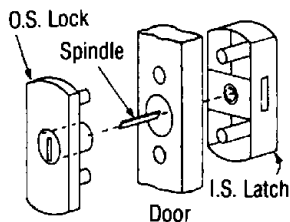

Wright Products

Rice Lake, Wisconsin 54868 U.S.A.